

How to logon into SMS foxbox system using FTP or SSH

The default IP ADDRESS of SMS FoxBox is 192.168.0.98.

By default SMS FoxBox accept connections over FTP and SSH using username: root and password: pass and by HTTP using username: Admin and password: GsmBox2006!

If you want to use SMS FoxBox on the WEB with a public IP address, it is really recommended that you change the logon details of the system access.

To change the password log into SMS FoxBox using SSH with your preferred terminal, as for example putty for windows .

From the command prompt type:

```
passwd
```

Enter the new password and confirmation when required. From now you need to provide this new password for FTP and SSH login.